
KY4KY 146.700 Repeater ALLSTAR and Echolink Commands

Due to the multiple VoIP modes and the fact that several nodes can be connected and disconnected, there is not a simple DTMF connect and disconnect command. Below is the list of the important DTMF commands when using the KY4KY ALLSTAR system.

WARNING: Please Do NOT connect a bunch of large nodes together without permission. The number of nodes and the quality of the connections are limited by the bandwidth of our internet connection.

***3 <node number>**

Connect to an AllStar node number. Ex. *340894 connect to AllStar node 40894 (audio test server). To add more nodes to the connection, just continue the sequence. For a current list of active ALLSTAR nodes go to <https://allstarlink.org/nodelist.php>

***1 <node number>**

Disconnect an AllStar node number. If you dialed a bunch of nodes, but only want to disconnect one, use this command.

***33<node number>**

Connect to an EchoLink node number. You will need to look up the node Number, not call sign for this to work.

IMPORTANT NOTICE: Echolink Node numbers must always be 6 digits long. If the node number is only 5 or 4 digits long, 1 or 2 zeros will NEED to be placed before the node number for it to work.

***13<node number>**

Disconnect an EchoLink node number. For example, a disconnect from the EchoLink test server would require the commands ***13 009999**

***2<node number>**

Connect to a node in Monitor mode (receive only). The node will not hear any transmissions of yours, but you will hear everything from the node ([use with caution](#)).

***71**

Probably one of the most important commands, this will disconnect all links (AllStar or Echolink).